






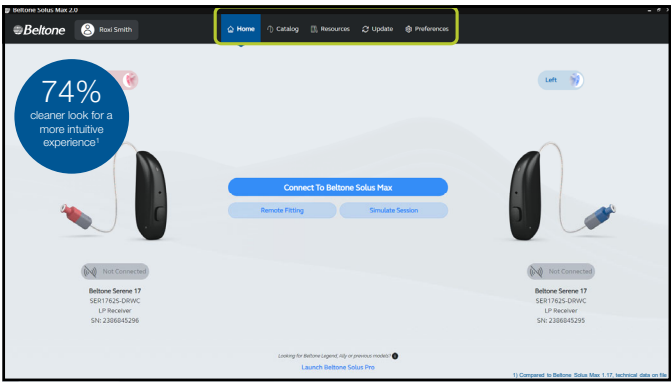


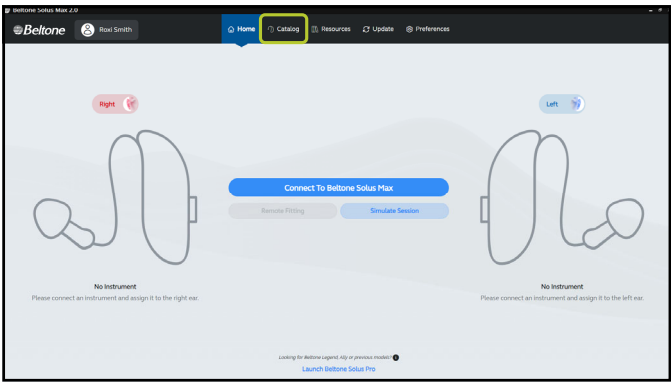

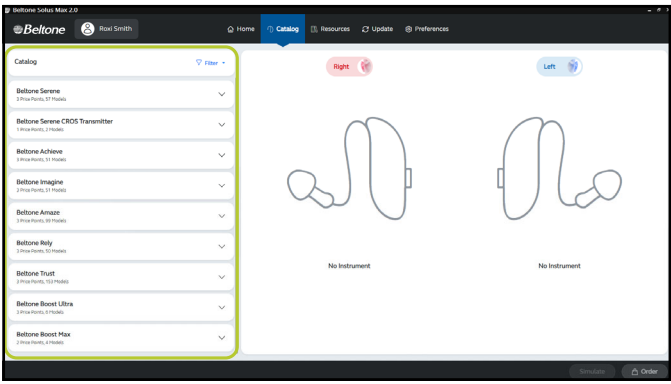


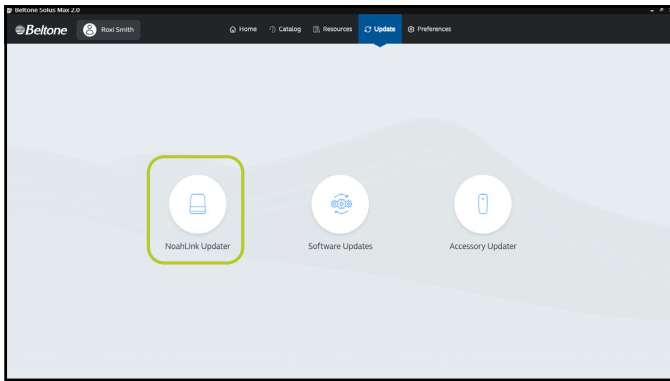

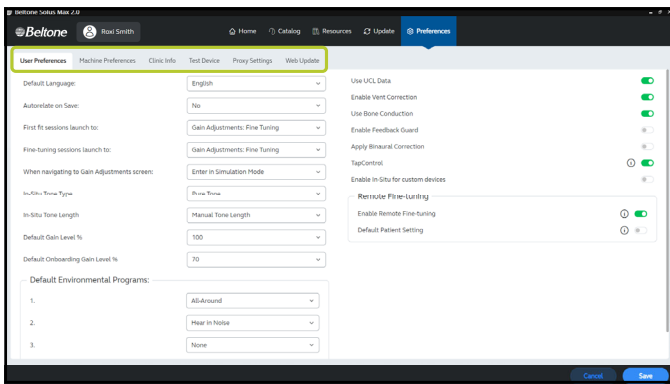

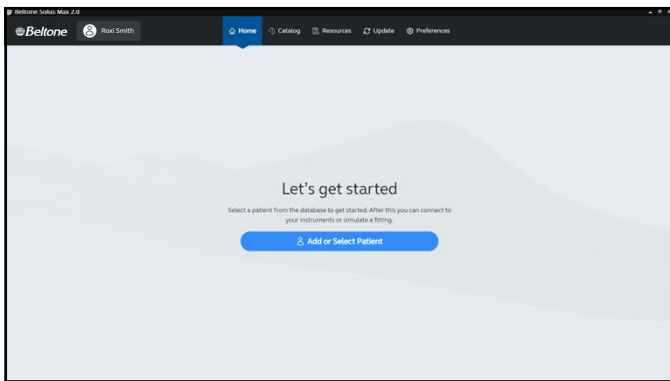

How Increased MPO Avoids Over Compression and Distortion

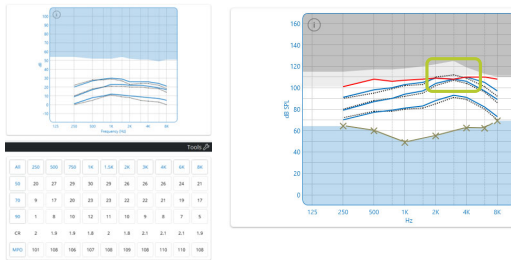

Belmonte UNIVERSITY

Use Instrument MPO When

Fitting a patient with a small dynamic range


Patient reports hearing aid is not loud enough, muffled or unclear

Receiver power cannot be increased

Setting up a Music Program

Belmonte UNIVERSITY

Hear in Noise: Smart Gain Settings

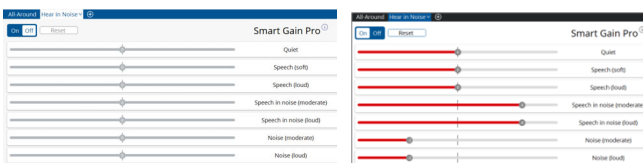

Belmonte UNIVERSITY

